SCOTT®

i-SX50

AUDIO SYSTEM WITH DOCKING STATION FOR iPod

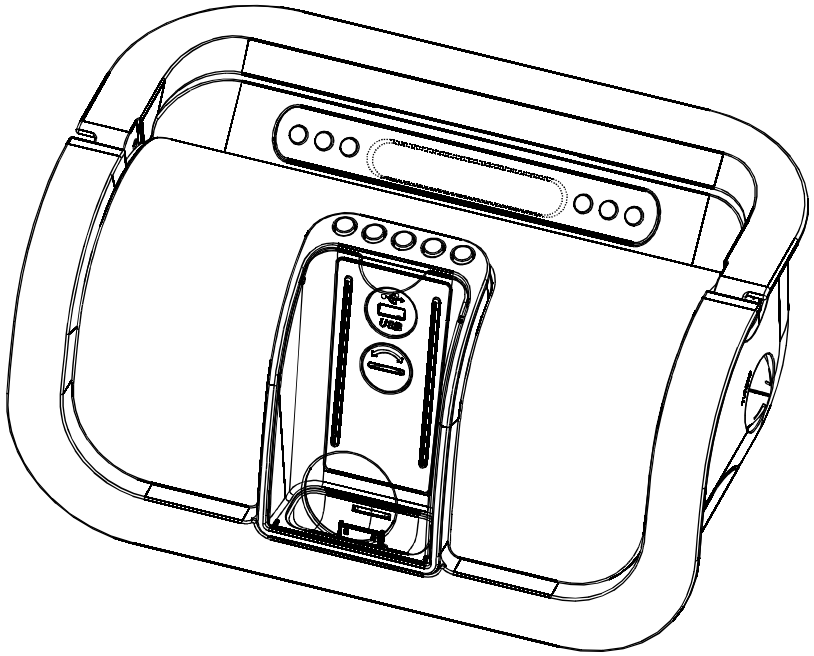

Instruction Manual

CE

PRECAUTIONS

Follow the advice below for safe and appropriate operations.

INSTALLATION

. Do not use the unit in places which are extremely hot, cold, dusty, or humid.
. Place the unit on a flat and even surface.
. Do not restrict the airflow of the unit by placing it in a place with poor airflow, by covering it with a cloth, or by placing it on a carpet.
. Do not place naked flame sources such as lighted candles on the apparatus.
. Use the apparatus only in moderate climates (not in tropical climates).
. Do not expose the apparatus to dripping or splashing.
. Do not place objects filled with liquids, such as vases, on the apparatus.

SAFETY

. When connecting and disconnecting the AC power cord from the AC mains outlet, pull the plug and not the cord itself. Pulling the cord may damage it and may be dangerous.
. The mains plug must remain readily operable.
. When you are not going to use the unit for a long period of time, disconnect the AC power cord from the AC mains outlet.

AC VOLTAGE

. Before use, check that the rated voltage of your unit matches your local voltage.

CONDENSATION

. When there is condensation inside the unit, it may not function normally.
. Unplug the unit for 1 to 2 hours before turning the power back on, or gradually heat the room up and dry the unit before use.
. Ensure a minimum distance of 5 cm around the apparatus for sufficient ventilation.
. Do not impede the ventilation by covering the ventilation openings with items such as newspapers, tablecloths, curtains, etc.

BATTERIES

. Pay attention to the environmental aspects of battery disposal.

	**CAUTION** RISK OF ELECTRIC SHOCK DO NOT OPEN	
The lightning flash with an arrowhead symbol within a triangle is a warning sign alerting the user to the presence of “dangerous voltage” inside the unit.	**ATTENTION**: To reduce the risk of electric shock, do not remove the cover. There are no user serviceable parts inside the unit. Refer all servicing to qualified personnel.	The exclamation mark within a triangle is a warning sign alerting the user to the presence of important instructions accompanying the product.

. In case of malfunction due to electrostatic discharge, the apparatus has to be reset by disconnecting it from mains supply.

TABLE OF CONTENTS

PRECAUTIONS…… 1
TABLE OF CONTENTS…….. …… 2
BOX CONTENTS…….. 2
LOCATION OF CONTROLS…….. …… 2
POWER SUPPLY…… 4
BASIC OPERATION…….. …… 5
RADIO OPERATION…… 6
USB DEVICE OPERATION…….. …… 7
PLAYING AN iPod AND CHARGING THE INTERNAL iPod BATTERY…… 8
AUX IN FUNCTION…….. …… 9
MAINTENANCE…… 9
TROUBLESHOOTING GUIDE…….. …… 10
TECHNICAL SPECIFICATIONS…… 10

BOX CONTENTS

1. Main unit
2. AC power cord
3. Remote control with battery
4. AUX IN cable
5. Instruction manual
6. Adapters for different iPod models (4x)

LOCATION OF CONTROLS

1. Handle
2. **ON/STANDBY** button
3. **SOURCE/CLOCK** button
4. **BAND/ENTER** button
5. ▲▼ **PRESET** buttons
6. ▶II PLAY/ PAUSE button
7. ■ STOP button
8. LCD display
9. REPEAT button
10. **MEMORY/MENU** button
11. SURROUND button
12. XBASS (Bass boost) button
13. Infra-red remote sensor
14. Tweeter (high frequency sound output)
15. Speaker
16. FM antenna
17. USB port
18. Adjustable support for iPod
19. iPod protective cover
20. Battery compartment
21. iPod universal docking station and connector
22. VIDEO OUT jack
23. **AC ~** socket
24. **AUX IN** jack
25. Headphones jack
26. **VOLUME +/-** buttons
27. ⏮ ⏭ **TUNE/SKIP** buttons

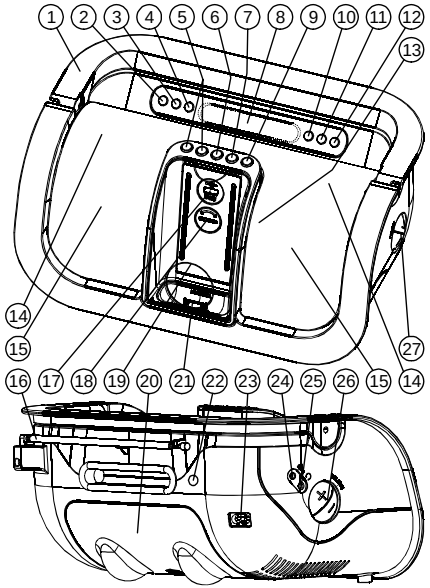

Remote control

1. **EQ** (Equalizer)
2. XBASS (Bass boost)
3. **ON/STANDBY**
4. **SOURCE/CLOCK**
5. **BAND/ENTER**
6. **MUTE**
7. **VOLUME +/-**
8. ⏭ TUNE/NEXT
9. ■ STOP
10. ▼ PRESET/FOLDER
11. REPEAT
12. ▶II PLAY/ PAUSE
13. ⏮ TUNE/PREVIOUS
14. **MEMORY/MENU**
15. **SURROUND**
16. ▲ PRESET/FOLDER

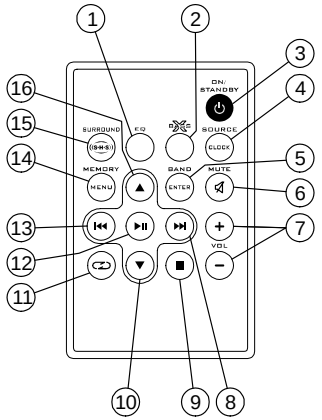

LCD display

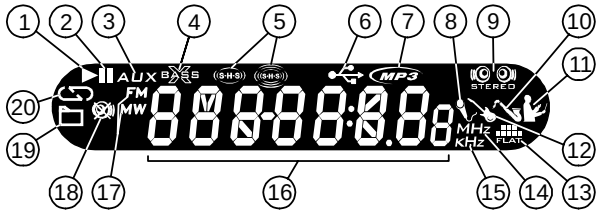

1. ▶ Play
2. II Pause
3. **AUX IN** mode
4. XBASS (Bass boost)
5. Surround sound (low, high)
6. USB mode
7. MP3 file
8. POP in EQ presets
9. STEREO mode in FM radio
10. JAZZ in EQ presets
11. CLASSIC in EQ presets
12. ROCK in EQ presets
13. FLAT in EQ presets
14. MHz: Unit of FM radio frequency
15. kHz: Unit of MW radio frequency
16. Digit and text display
17. Radio FM/ MW mode
18. Mute function
19. Repeat folder
20. Repeat

POWER SUPPLY

Using AC power supply

Insert the AC power cord into the AC mains outlet with a 230V AC ~ 50Hz power source and the other end to the **AC ~** socket at the back of the unit.

Using batteries

1. Open the battery compartment.
2. Insert 6 x UM2/ "C" size batteries (not supplied) with the polarities (+/-) matching the engraved markings in the battery compartment. Reversed batteries may damage the unit.
3. Close the battery compartment.

Note: When AC power is supplied, the battery power is cut off automatically.
When an AC power failure or interruption occurs and the unit does not have batteries installed, the time and preset stations will be lost. It is recommended to install the batteries as back up. When replacing batteries replacement, always connect the AC power supply to avoid losing the time and preset stations.

Installing the remote control battery

1. Remove the battery compartment cover on the bottom of the remote control, by pressing the tab to the right while removing the cover.
2. Insert a 3V lithium battery (CR2025 or equivalent) with the polarity (+) matching the indication inside the battery compartment cover.
3. Replace the battery compartment cover.

Note: The remote control battery normally lasts for about one year, although it depends on how often and for what operations the remote control is used.
If the remote control fails to work even when it is operated near the unit, replace the battery.

Precautions when using batteries

1. **CAUTION**: Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.
2. Do not mix different types of batteries together (e.g. alkaline, rechargeable and standard (carbon zinc)) or old batteries with fresh ones.
3. Exhausted batteries must be removed to prevent any battery leakage.
4. Dispose of batteries properly according to environmental regulations.

BASIC OPERATION

ON/ Standby mode

After connecting the power supply (refer to "**POWER SUPPLY**"), the unit goes to standby mode and the clock time is displayed. Press the **ON/STANDBY** button to turn on the unit and press it again to go to standby mode.

Setting the clock time

1. In standby mode, press the **SOURCE/CLOCK** button. The hour digits will flash.
2. Press the ⏮/⏭ buttons to set the hour.
3. Press the **SOURCE/CLOCK** button to confirm and the minute digits will flash.
4. Press the ⏮/⏭ buttons to set the minutes.
5. Press the **SOURCE/CLOCK** button again to confirm the time setting.

Selecting the source

When the unit is switched on, press the **SOURCE/CLOCK** button repeatedly to select one of the following sources: iPod, USB, AUX or Radio.

VOLUME control

Press the **VOLUME +/-** buttons to adjust the volume level.

MUTE function

Press the **MUTE** button on the remote control to turn off the sound. The symbol "🔇"is displayed. Press it again or use the **VOLUME +/-** buttons to resume the sound.

XBASS function

Press the XBASS button to boost the bass effect. The symbol "XBASS" is displayed.

Surround sound

Press the **SURROUND** button repeatedly to select the surround sound effect: Low, High or off.

EQ function

Press the **EQ** button on the remote control repeatedly to select your desired music mode in the following sequence:

FLAT → ROCK → POP → JAZZ → CLASSIC

Connecting headphones

Plug in headphones (not supplied) to the headphones jack at the side of the unit for private listening. The speaker output will be shut off automatically.

RADIO OPERATION

Listening to the radio

1. When the unit is switched on, press the **SOURCE/CLOCK** button to select Radio mode.
2. Press the **BAND/ENTER** button to select FM or MW.
3. Press and hold down the ⏮/⏭ button to launch an automatic search up / down. Release the button when the unit receives a radio station that you would like to listen to. For manual fine-tuning, you can press the button repeatedly to adjust the frequency step by step.

FM Stereo

In FM mode, STEREO is displayed when the unit receives a station with a strong signal station and stereo sound.

Achieving optimum reception

In FM mode, extend and position the FM antenna to achieve optimum reception.
In MW mode, orientate the main unit to achieve optimum reception.

Preset radio stations

You can store up to 15 stations for FM and 10 stations for MW.

1. Use the ⏮/⏭ buttons to search for a desired station. Press the **MEMORY/MENU** button to store a station. A preset number will flash.
2. Press the ▼/▲ buttons to select a preset number that you would like to allocated to this station.
3. Press the **MEMORY/MENU** button again to confirm the setting.
4. Repeat above steps (1) to (3) to store any other desired stations.

Listening to a preset station

When listening to the radio, press the **PRESET** ▼/▲ buttons to select a preset radio station.

USB DEVICE OPERATION

Insert a USB device into the **USB** port on the front panel of the unit. When the unit is switched on, press the **SOURCE/CLOCK** button to select USB mode.

Note: Due to technical differences, some models of USB storage devices or MP3 players may take longer to be read. In some cases, they may not even be read.

Start playback

1. The unit will read the files on the USB device and will then display the total number of folders and tracks.

2. Press the ▶II button to start playback from the first track. The track number and elapsed track duration will be displayed. The elapsed track duration and the folder number will briefly be displayed together, then the track number and - if relevant - the folder number and so on.



Note: Default playback mode is Repeat All "🔁".

Pause playback

Press the ▶II button to pause the playback and press it again to resume playback.

Stop playback

Press the ■ button to stop playback. Press the ▶II button to start playback from the first track.

Skip function

Skip to next/ previous track

1. Press the ⏭ button to skip to the next track.
2. Press the ⏮ button once to skip to the beginning of the current track. Press it twice to skip to the previous track.

Skip to next/ previous folder

Press the ▼/▲ buttons to skip to the next/ previous folder.

Repeat modes

Press the 🔁 button to select one of the following repeat modes listed in the table below.

Playback mode	Icons displayed	Description
Repeat All	🔁	Repeat all the tracks (default mode).
Repeat Folder	🔁	Repeat the tracks in the folder.
Repeat One	🔁 blinks	Repeat the current track.

PLAYING AN iPod AND CHARGING THE INTERNAL iPod BATTERY

Installing an adapter on the iPod docking station

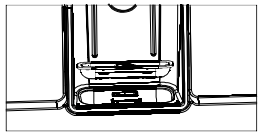

1. Select the iPod adapter that corresponds to your iPod model from the table below. The adapter number is marked at the back of the adapter.
2. Insert the adapter into the docking station at the top of the unit, with the two tabs facing forwards.
3. To remove the adapter, press the back of the adapter and pull it up.

Adapter No.	iPod description	Capacity	Adapter supplied with this unit (yes/ no)
4	4G iPod & U2 iPod	20GB	yes
5	4G iPod	40GB	yes
6	iPod photo & Color U2 iPod iPod with color display	20GB & 30GB 20GB	yes
7	iPod photo iPod with color display	40GB & 60GB 60GB	yes
8	iPod nano	2GB & 4GB	no
9	5G iPod & U2 iPod with video	30GB	no
10	5G iPod with video iPod classic	60GB & 80GB 160GB	no
11	iPod nano (2nd generation)	2GB, 4GB, 8GB	no
13	iPod nano (3rd generation)	4GB & 8GB	no
14	iPod touch	8GB & 16GB	no

Note: 1. Only the adapter Nos. 4, 5, 6 and 7 are supplied with this unit. Adapter numbers 8 to 14 should be supplied with their corresponding iPod model and they can also be used with this universal docking station.

2. Ensure that you use the adapter corresponding to your iPod in order to ensure that it is installed in a stable way and that the electrical contact is good.

Listening to your iPod

1. With the correct iPod adapter installed, use a coin to turn the adjustable support so that it will fit a large iPod and gently dock the iPod (without its protective cover) into the unit's universal docking station.
2. The internal iPod battery will be charged until it is fully charged.
3. When the unit is switched on, press the **SOURCE/CLOCK** button to select "iPod".

4. You can now use the remote control to control iPod functions.
5. Press the **MEMORY/MENU** button on the remote control to access the iPod menu.
6. Press the ▼/▲ buttons to move within the menu and make a selection.
7. Press the **BAND/ENTER** button to confirm your selection.

. Press the **MEMORY/MENU** button to return to previous menu.

8. When a song is selected, press the **BAND/ENTER** button to play the music.
9. During playback, you can press the **MEMORY/MENU** button to return to the menu.
10. To pause/ stop play or skip, refer to the instructions in the "USB DEVICE OPERATION" section.
11. Alternatively, you can use the controls on your iPod .

Watching a video recorded on your iPod

Connect the VIDEO IN jack on the external video device, such as a TV, to the unit's VIDEO OUT jack with a video cable (not supplied) to transfer the video signal from your iPod, (if available), to the TV. Next, refer to the "Listening to your iPod" section.
Note: Check that the TV output on your iPod (TV OUT) is set to "ON".

iPod Protective cover



With the iPod docked into the unit, place the protective cover over the iPod in order to protect it for portable use.

Note:

*1. Adjust the volume to the desired level using the **VOLUME +/-** buttons on the unit or the **VOL +/-** button on the remote control.*

2. This unit display cannot show any file information (e.g. file name) contained on your iPod. Please view the file information through your iPod display.

3. To prevent sound distortion during iPod playback on this unit, the EQ function in your iPod must be set to "Off".

*4. The unit is not designed for playing or charging an iPod Shuffle, but it is possible to connect the iPod's line out or headphones jack to the **AUX IN** jack on the unit.*

AUX IN FUNCTION

This unit has an **AUX IN** jack and is provided with a cable to connect your external audio devices such as MP3 players or an earlier iPod model.

1. Plug the AUX IN cable (supplied) into the AUX IN jack.
2. When the unit is switched on, press the **SOURCE/CLOCK** button to select "AUX".

3. Operate your external audio device as usual to select and play music.
4. Adjust the volume controls on both your external audio device and this unit to the desired volume level.

Note: In AUX IN mode, this unit display cannot show any music information (e.g. track number) for your external audio device.

MAINTENANCE

Care and maintenance

To clean the casing, unplug the unit and wipe off dust and stains with a soft cloth moistened with a mild soap and water solution only. Do not use benzene, thinner or similar chemicals to clean the casing.

If at any time in the future you should need to dispose of this product, please note that waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your local authority or retailer for recycling advice. (Waste Electrical and Electronic Equipment Directive).

TROUBLESHOOTING GUIDE

Problems	Recommendations
1. The player or display does not work properly	1.1 Press the ON/STANDBY button to go to Standby mode and press it again to turn on the unit. 1.2 Reset by unplugging the AC power cord for few seconds, then plug it back in.
2. No sound, poor sound	2.1 Check the cable connections.
3. USB device is not read	3.1 Check that the USB device file system is in FAT or FAT32 format. 3.2 Due to different formats, some models of USB storage devices or MP3 players may not be read.
4. Noise or distorted sound in radio mode.	4.1 FM mode: Extend and position the FM antenna to achieve the best reception. 4.2 In MW mode, orientate the unit to achieve optimum reception.
5. No sound, poor sound in iPod mode	5.1 Check that you have chosen the correct adapter. 5.2 The EQ function in your iPod must be set to “Off”.
6. No video output	6.1 Check that your iPod TV output (TV OUT) is set to “ON”.

TECHNICAL SPECIFICATIONS

USB

Compatible files	MP3
USB port type	2.0
USB maximum handling capacity:	2GB

Radio

Tuning range	FM: 87.5 – 108 MHz MW: 522 – 1620 kHz
Antenna	FM: telescopic antenna MW: built-in ferrite bar

General

Output power (RMS)	2 x 4.5 W (AC power) 2 X 2 W (battery power supply)
Power consumption	20 W
Tweeter	2” diameter, 4 Ohm impedance
Speaker	4” diameter, 4 Ohm impedance
Power source	AC 230V ~ 50Hz DC 9V: 6 x 1.5V batteries UM2/”C” size
Dimension	154 (H) x 340 (W) x 215 (D) mm
Weight	2.5 Kg

Note: Due to continuing improvements, the technical specifications are subject to change without notice.

Where to place the item:
Today’s furniture is coated with a wide variety of lacquers and synthetic-coatings that are treated with an extensive range of cleaning products. Therefore, the possibility that some of these substances contain components that react adversely to the rubber feet of the item and soften them, cannot be completely excluded. The rubber feet of the appliance can cause discoloring to furniture surfaces. If necessary, place the appliance on a non-slide surface.